


Replacement of the Glass

1



The glass was damaged in action

2

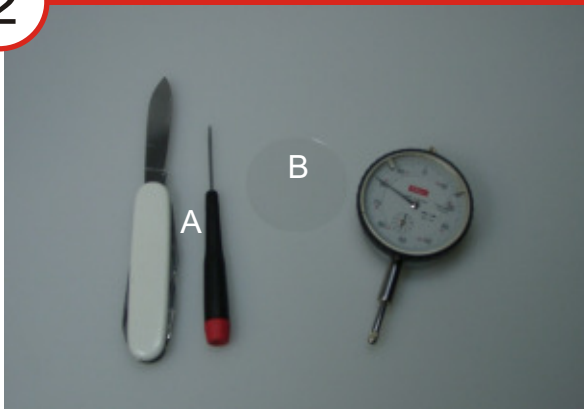

To replace the glass you need a knife or a small screwdriver (A) and a new glass (B).

3



First, you remove the tolerance markers using the knife or the small screwdriver. For this task there are fixed small sinkings at the ends of the tolerance markers.

4



Remove the tolerance markers from the bezel. For the second tolerance marker, please proceed like shown in pictures 3 and 4

5



After removing the tolerance markers, please remove the damaged glass. The glass will come out without problems.

6



Now, a new glass has to be inserted into the bezel.

7



The tolerance markers now must be put in the bezel. Please press to reduce the radius and then snap them into the bezel.

8



The glass now is replaced. You may use the gauge again from now on.